



600 Series


PROACTIVE CLASS A2 FIRE RATED ALUMINIUM DECKING INSTALLATION MANUAL

CARE AND MAINTENANCE

Congratulations on your purchase of your Proactive Class A2 Fire Rated Aluminium Decking board. To ensure that you keep your decking looking its best we recommend that you follow a few easy guidelines

To ensure that your Proactive decking does not get scratched we recommend using furniture that has soft felt pads under their legs. Decking boards should be cleaned at regular intervals but at the very least they should be cleaned twice a year as excess dirt can cause damage. They can be cleaned using a solution of warm soapy water and a soft bristle brush. The structure should then be rinsed clean thoroughly with water. No form of abrasive should be used at any time on the painted surface. Please ensure that any concentrated cleaner should be diluted as per the manufacturer's instructions. Do not use bleach, solvents, abrasive paste or cream cleaners as they could damage the surface of your aluminium decking.

These guidelines may not cover every maintenance scenario. If you have additional questions please contact our friendly service team on 0800 799 9082

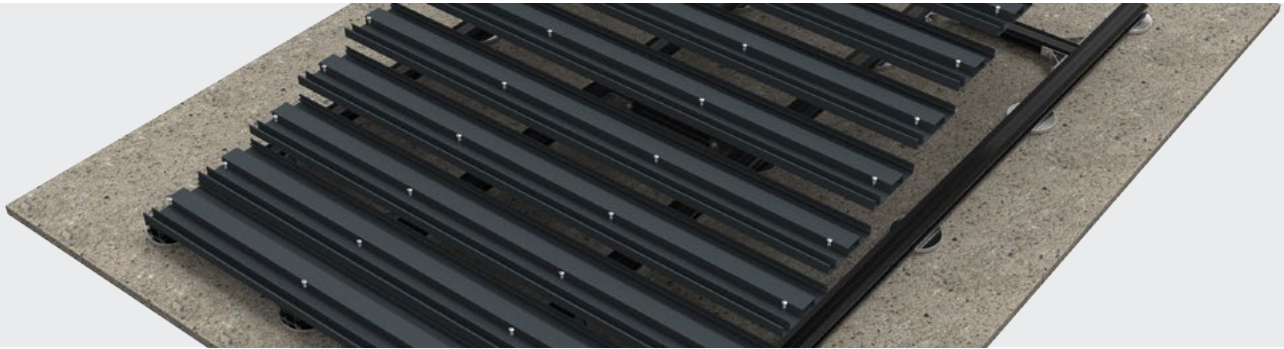

With your subframe ready and your foundations prepared you are ready to install the easiest aluminium decking system. The installation for the decking is the same if choosing to install directly onto joists, bearers or a pedestal support system.



1 Ensure all bearers and joist are set to 600mm centres



2 Align the base first board at the outer edge of the decking




3 Screw through either of the two channels but not the water drainage channel into the joist or bearer using suitable fixings. Fixing should be installed on every joist or bearer



4 Clip in the top finishing board just a rubber mallet if required to gently secure in place




5 Complete this process until the decking is complete

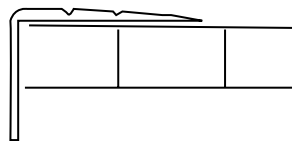

6 If the last boards needs cutting down along its length mark the board and cut using a suitable saw and blade. Fasten the base board in position as previous and clip the top board into place.

7 To secure use a finishing trim, use a pan head screw to secure.

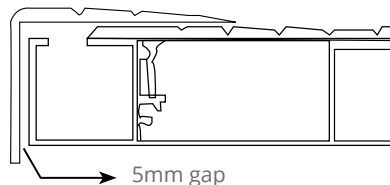

8 If you use a trim to control the flow of water a 5mm gap must be left to allow the water dissipate

INSTALLATION OVERVIEW

Proactive decking boards can be installed onto steel or aluminium joists	Maximum centres between joist 600mm
No clips are required	A slope of around 1:100 is required to facilitate water run off
Minimum of 3mm for butt joints	Maximum joist overhang of 20mm permitted

